

DOWNLOADING DESIGNS FROM THE INTERNET

Making a Design Folder

1. On the desktop of your computer is an icon that says *My Computer*.
2. Double left click on *My Computer*
3. Then double left click on *Local Disk (C:) Drive*
4. Go to the top left hand corner under File and click on New then click on Folder
5. A new folder will appear
6. Left click in the box and type in Designs
7. You now have a Designs folder on your *Local Disk (C:) Drive* to store your designs

Downloading from a website that has free designs:

Let's use www.brother-usa.com/HomeSewing/ as our example

1. Find where they free designs are on the website. In this case they are under *Free designs and Stitches*.
2. Click on *free designs* (a new page appears)
3. Click on the *down arrow* next to the word designs
4. Click on a category like *Taste of Brother*
5. Click on the picture of the design
6. A file download box will appear Click on *Save*
7. A Save as box will appear Choose where you want the design saved and *click save*

To load the designs to your sewing machine via a USB stick:

1. Place your USB stick in the computer
2. Go to *MY COMPUTER*
3. Double Left Click on *Local Disk (C:)*
4. Double Left Click on Designs Folder
5. Right Click on the design you want
6. Then left click on the Send To
7. Find the drive your USB stick is in (usually it appears as the name brand of the USB Stick) Left click on that drive
8. Your design will appear on your machine under the USB icon

To load designs to your sewing machine by direct connect

1. Connect the USB cord to your machine and to your computer
2. Go to *MY COMPUTER*
3. Double Left Click on *Local Disk (C:)*
4. Double Left Click on Designs Folder
5. Right Click on the design you want
6. Then left click on the Send To
7. Find the *Removable Disk Drive* (Your machine will show up as a Removable Disk) left click on it
8. Your design is now on your machine under the USB symbol